



STUDENT DEVICES: CHROMEBOOK TIPS, TRICKS, & FIXES

Connecting to Wireless

- Click on the space containing the time at the bottom right of your screen
- Click on the wireless symbol 
- Select the name of the wireless to which you want to connect.
- Enter the password.
- Click **Connect**.

Clear Browsing Data

- Open the Chrome browser.
- In the upper right, click 
- Click on **History**.
- On the left, click **Clear browsing data**.
- Select the Time range (default is All time).
- Click **Clear data**.

Language Settings

- At the bottom right, **click on the time**.
- Click on  **Settings**
- Click on **Advanced**.
- Click **Languages and Input**.

Accessibility Features

- At the bottom right, click on the time.
- Click on  **Settings**
- Click on **Advanced**.
- Click on **Accessibility**.
- Click on **Manage accessibility features**.

Reset Settings to Default

- Open the Chrome browser.
- In the upper right, click 
- Click on **Settings**.
- Click on **Advanced**.
- Click on **Reset settings**.
- Click on **Restore settings to their original defaults**.
- Click on **Reset settings**.

Chromebook Sign-in

Are you having problems accessing the internet on your Chromebook? Follow these simple steps to get back online!

- 1** At the bottom right, select the time.
- 2** Click Sign out.
- 3** On the sign in screen, click the downward-facing arrow  by your user name.
- 4** Click Remove this user, and confirm removal.
- 5** Sign in to your home Wi-Fi.
- 6** Sign back in to your Chromebook.